

FIG. 1

FIG. 6

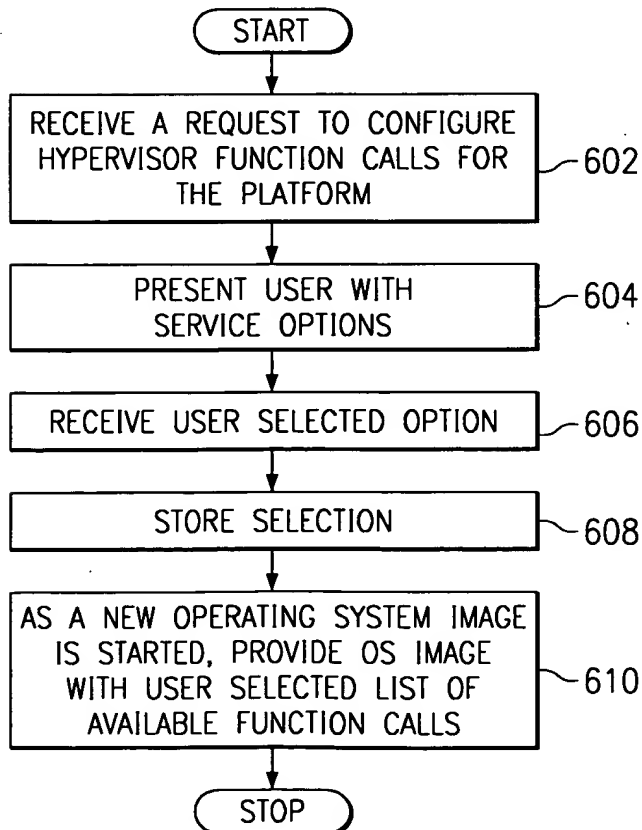
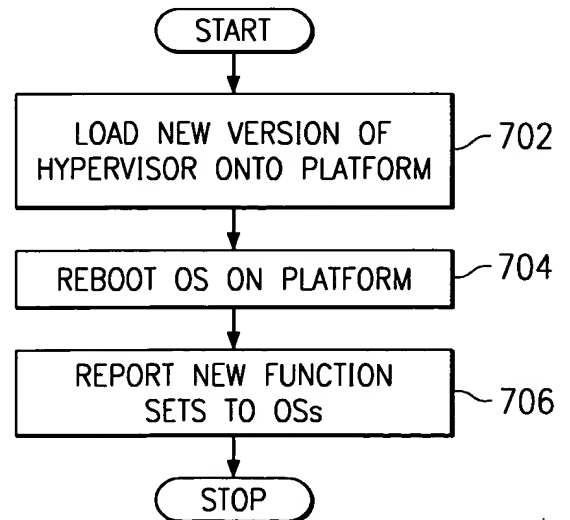


FIG. 7



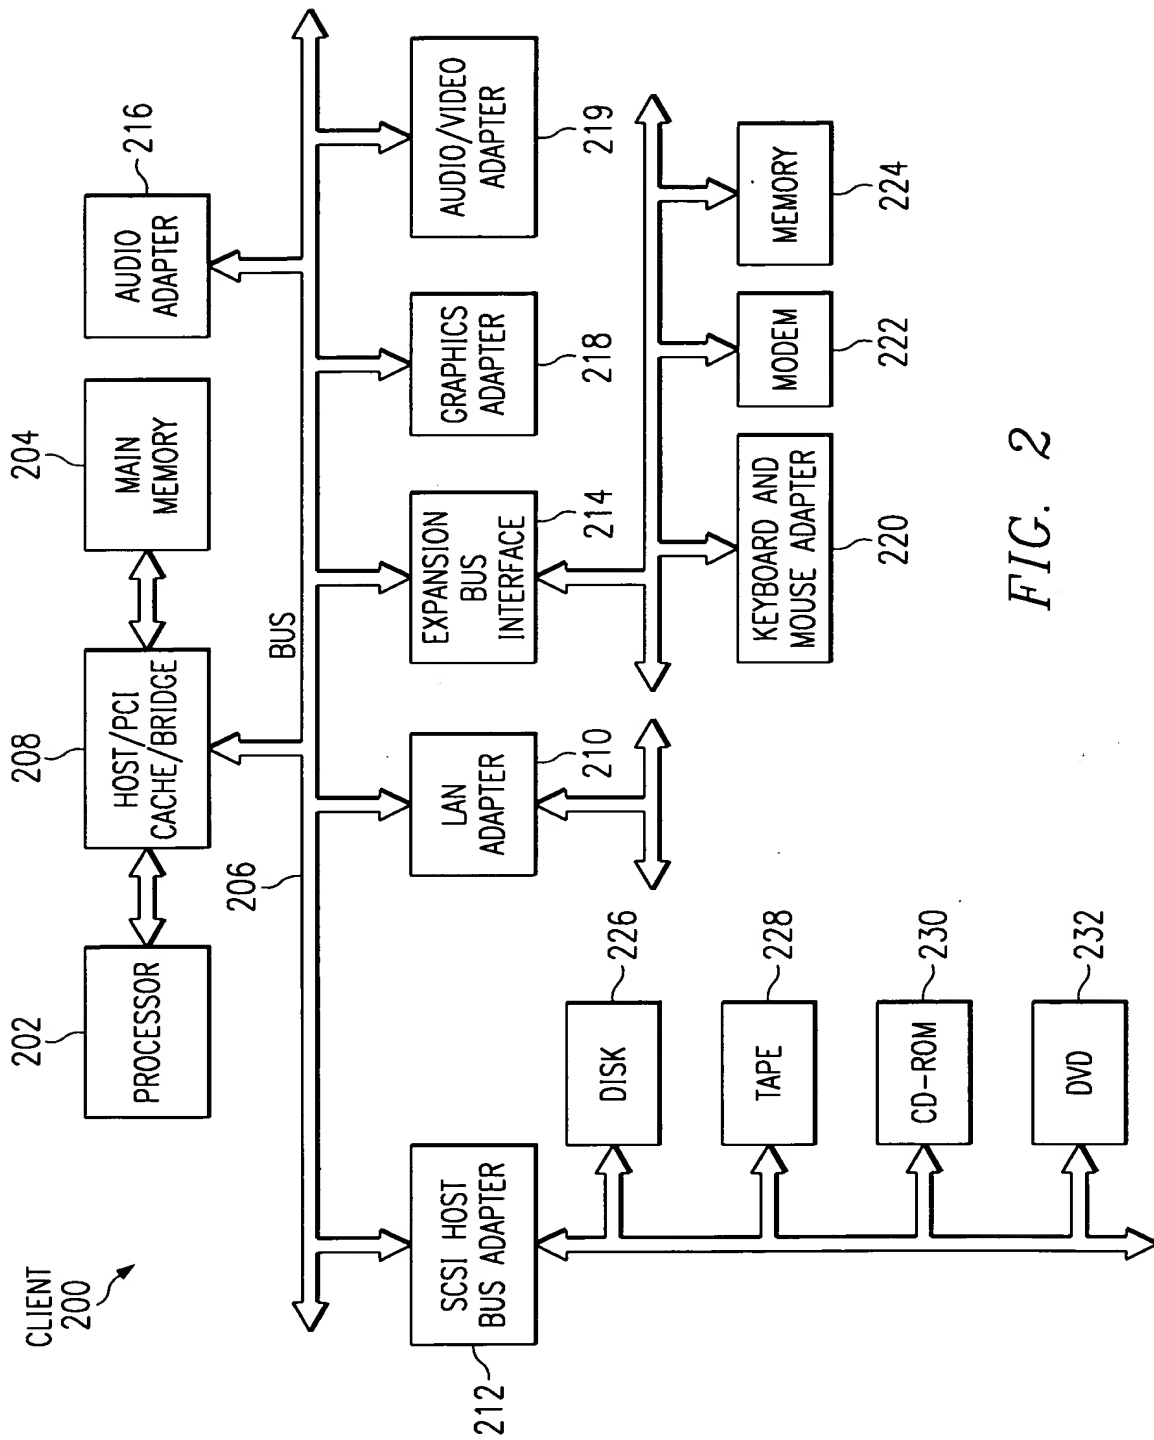


FIG. 2

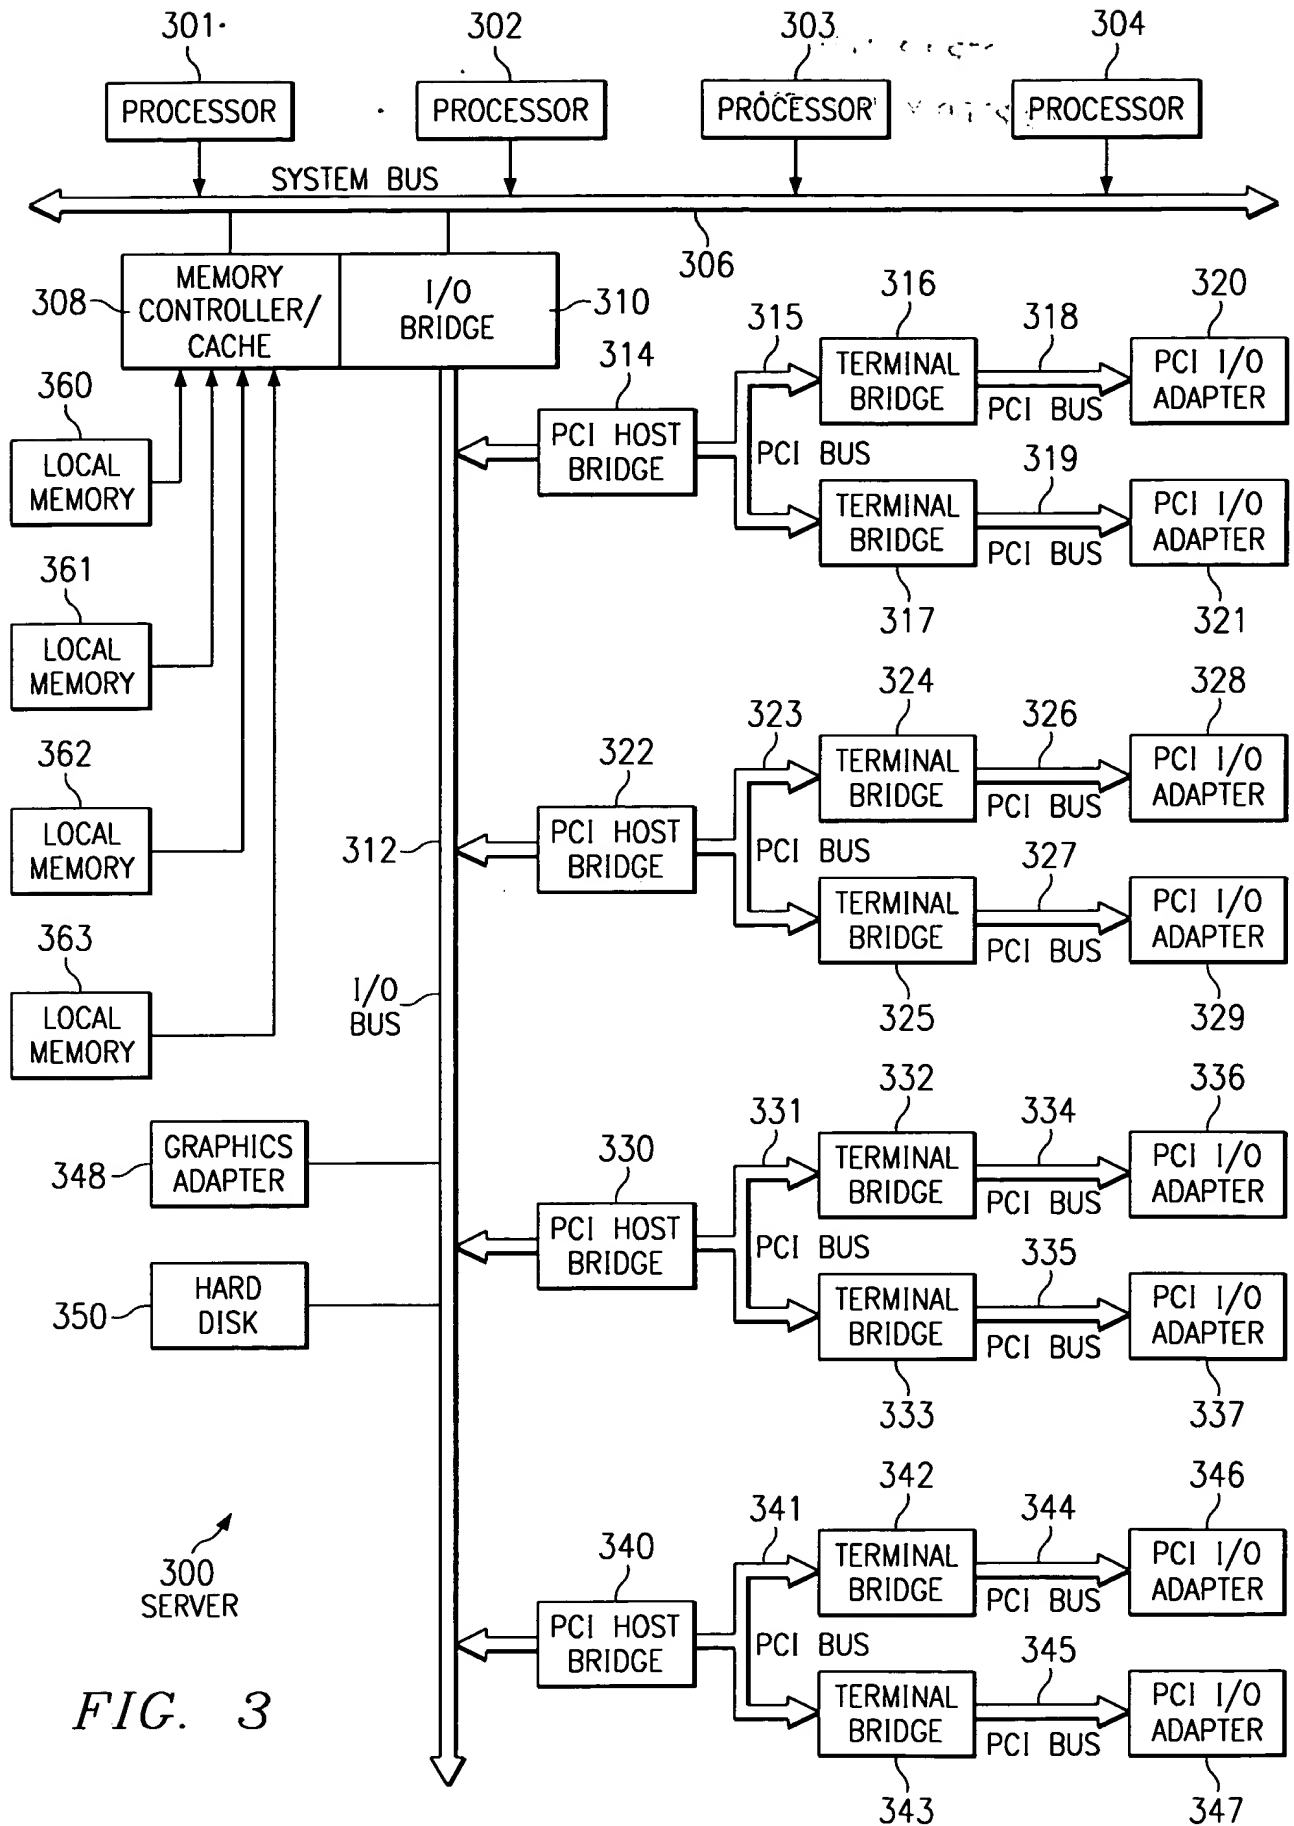


FIG. 3

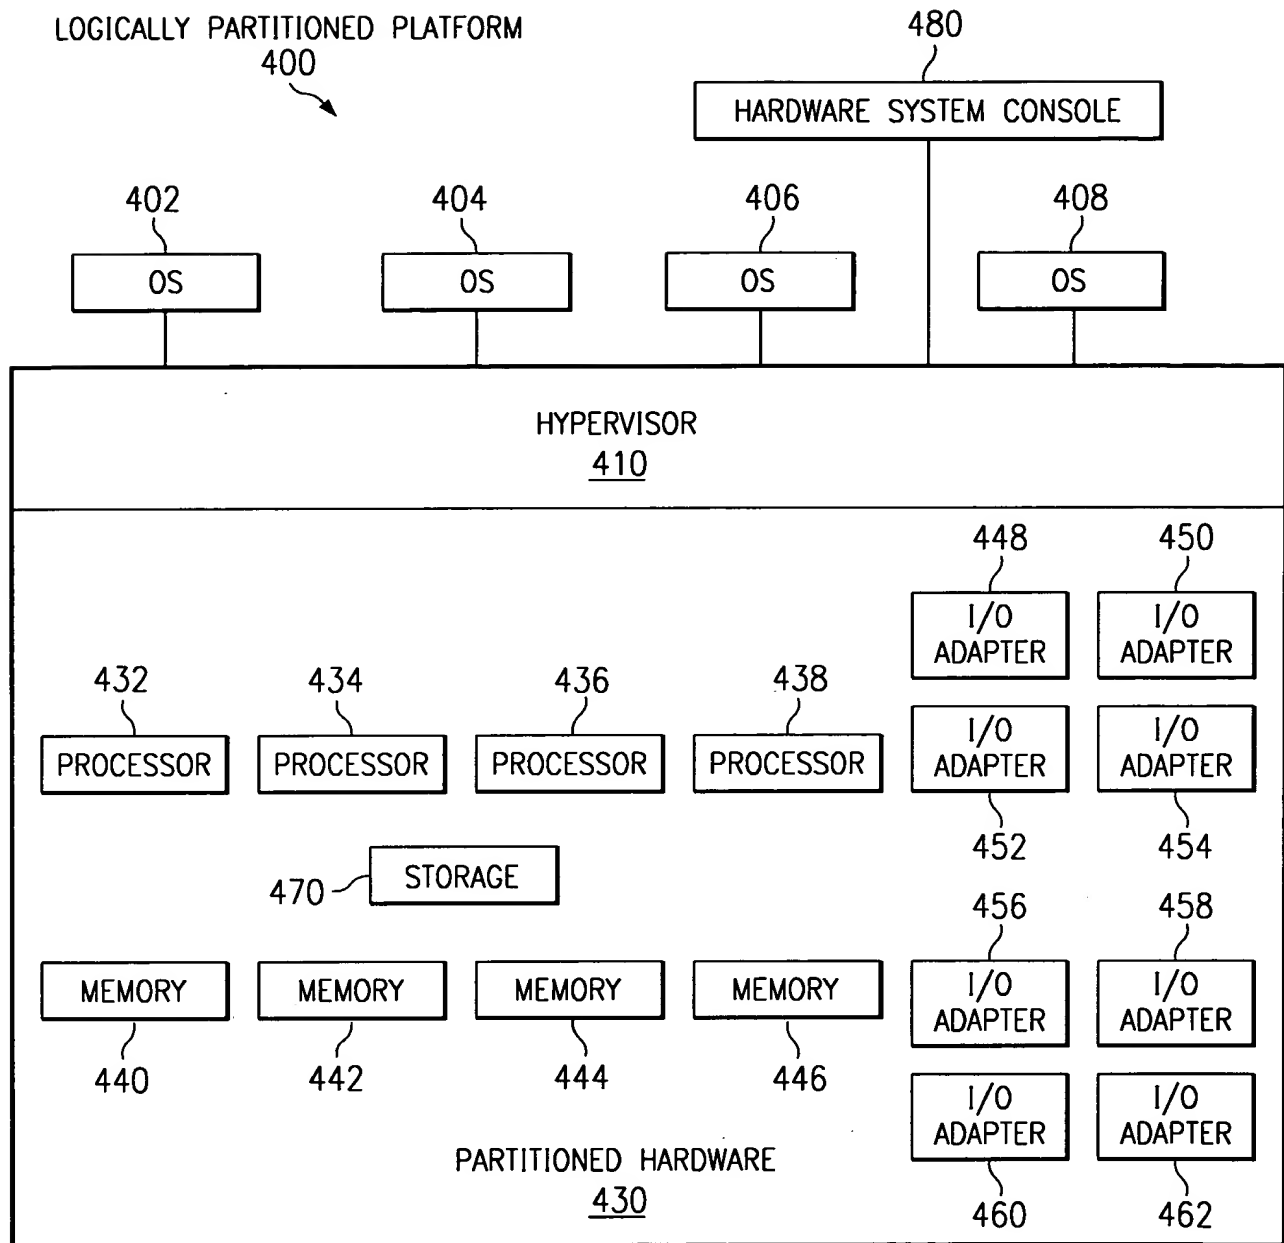


FIG. 4

MODIFIED 10/12/01

HYPERVISOR FUNCTION SET TABLE		
520	500	530
FUNCTION SET NAME:		FUNCTIONS:
501 ~ hcall-pft		H_REMOVE, H_ENTER, H_READ, H_CLEAR_MOD, H_CLEAR_REF, H_PROTECT
502 ~ hcall-tce		H_GET_TCE, H_PUT_TCE
503 ~ hcall-sprg0		H_SET_SPRG0
504 ~ hcall-dabr		H_SET_DABR
505 ~ hcall-copy		H_PAGE_INIT
506 ~ hcall-asr		H_SET_ASR, H_ASR_ON, H_ASR_OFF
507 ~ hcall-debug		H_LOGICAL_CI_LOAD, H_LOGICAL_CI_STORE, H_LOGICAL_CACHE_LOAD, H_LOGICAL_CACHE_STORE, H_LOGICAL_ICBI, H_LOGICAL_DCBF
508 ~ hcall-term		H_GET_TERM_CHAR, H_PUT_TERM_CHAR
509 ~ hcall-perf		H_REAL_TO_LOGICAL
510 ~ hcall-dump		H_HYPERVISOR_DATA

FIG. 5